



## Wiring Diagram for WR-1 Installation

(Rev 1 09/05)

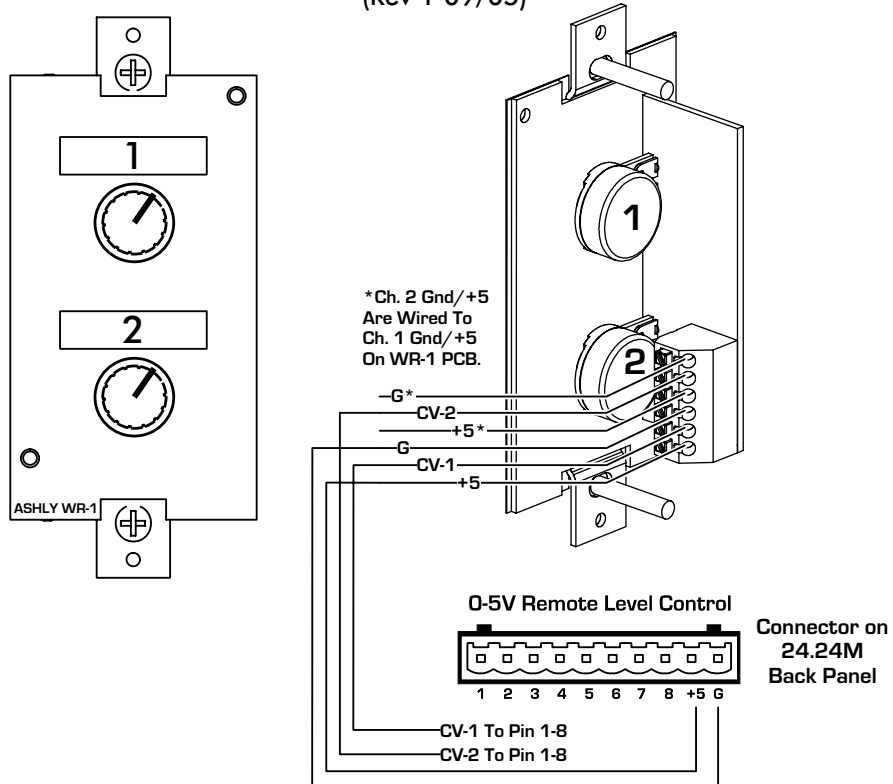

## Wiring Diagram for WR-2 Installation

(Rev 1 09/05)

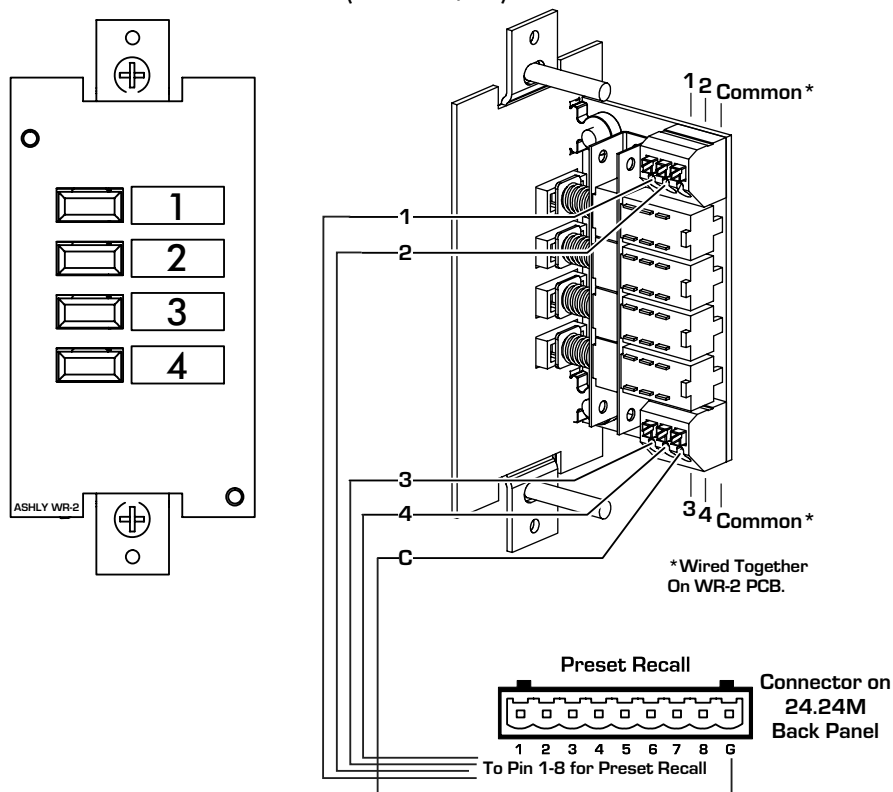



# Wiring Diagram for WR-3/WR-4 Installation

(Rev 1 09/05)

