



Wiring Diagram for WR-1 Installation

(Rev 1 09/05)

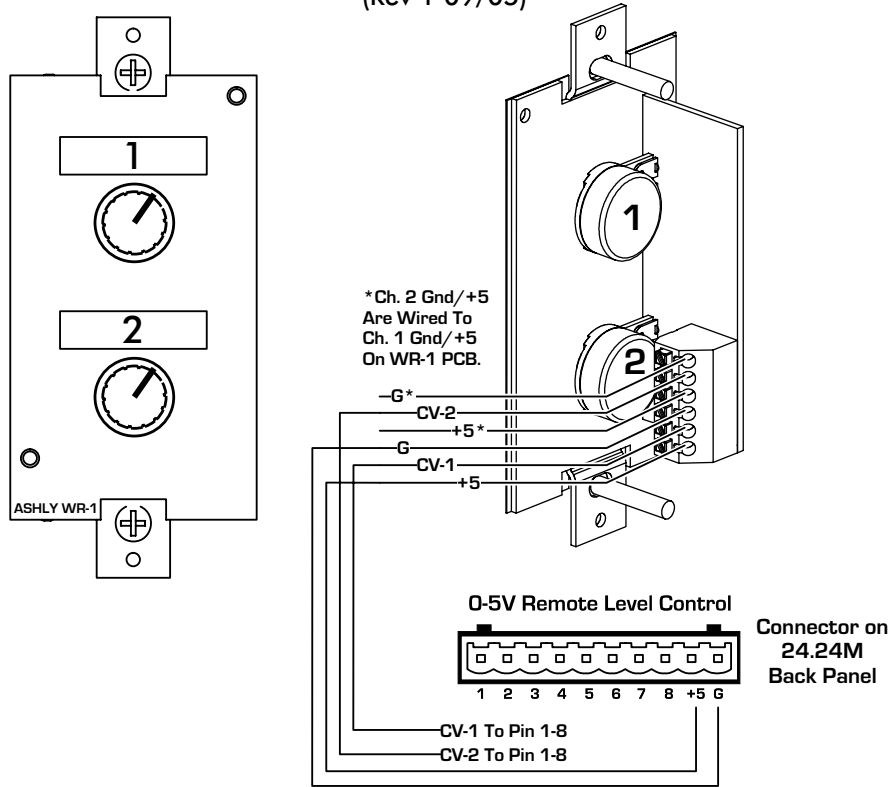

Wiring Diagram for WR-2 Installation

(Rev 1 09/05)

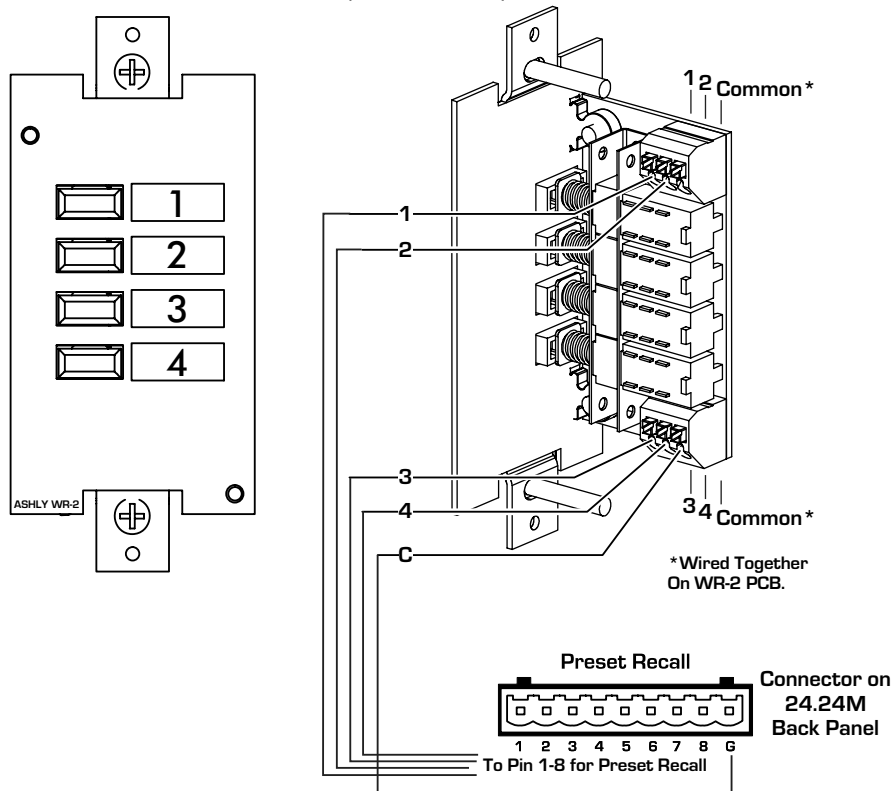



Wiring Diagram for WR-3/WR-4 Installation

(Rev 1 09/05)

